

2401 Touch Panel Overlay (40m Frame): Glass Fitting Instructions

The following instructions are used to fit glass to the 2401 Touch Panel Overlay (40mm Frame).

Requirements:

Glass (size as per measurements provided, Toughened Safety Glass or refer to diagram)


Allen Key – 3mm

Polystyrene Covering large enough to support the entire Touch Panel


- Place the Touch Screen face down on suitable covering such as polystyrene or similar.
- The Backlight Retainers need to be removed from one side of the frame and the end of the frame (i.e. the end that does not have a Camera Bar). The Backlight Retainer on the other side of the frame needs to be loosened (but not completely removed).

On one side of the frame, using the Allen Key, remove the bolts and screws (depending on the type of fastener used), from the Backlight Retainer, on one side of the frame and the Backlight Retainer at the end of the frame (i.e. the end that does not have a Camera Bar).

Place any bolts and screws (as required) removed in a safe place, where they can be easily located when you replace them.

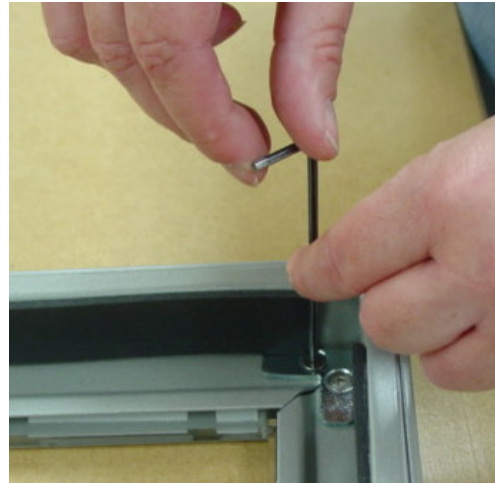


- Completely remove the Backlight Retainer from one side and the end (i.e. the end that does not have the Camera Bar).

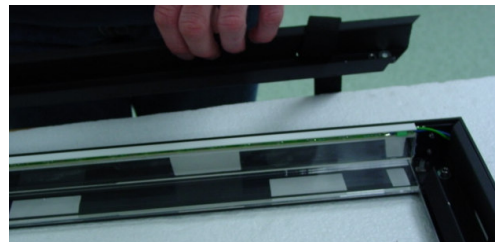

- Loosen the bolts and screws from the Backlight Retainer on the other side of the frame but do not remove completely.
- Take the glass and slide it into the loosened side of the frame.

Note: If necessary remove any screws and bolts in order to slide glass under the frame.

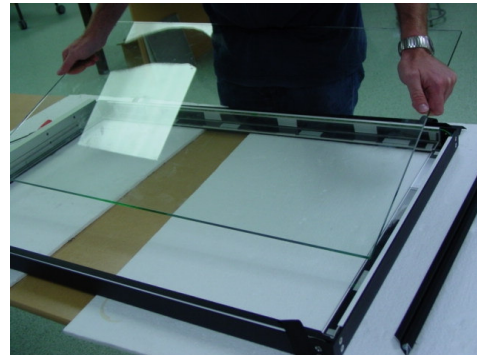

- Refit the removed Backlight Retainers and do the screws and bolts back up (as required), in the following order:
 - Do the screws and bolts (as required) up on the Backlight Retainer on the side where the glass was fitted first (this is the side where the backlight retained was loosened but not completely removed)
 - Next fit the end Backlight Retainer, and tighten those screws and bolts (as required).



- Last fit the removed side backlight retainer and do the screws and bolts (as required) back up

Note: Fitting the screws and bolts (as required) back on may require some dexterity (smaller fingers may be required!)

