

2405 and 2406 Touch Panel Overlay (30mm Frame): Glass Fitting Instructions


The following instructions are used to fit glass to the 2405 and 2406 Touch Panel Overlay.

Requirements:

- Glass (size as per measurements provided, Toughened Safety Glass or refer to diagram)**
- Allen Key (3mm) / Screwdriver**
- Allen Key (2mm)**
- Polystyrene Covering large enough to support the entire Touch Panel**


- Place the Touch Panel Overlay face down on suitable covering such as polystyrene or similar.
- Remove the Backlight Retainers from the three sides (not including the Camera Bar end of the frame), as follows.

Take off the two Backlight Retainer Clamps and six retaining screws, using suitable Screwdriver or the Allen Key (3mm).

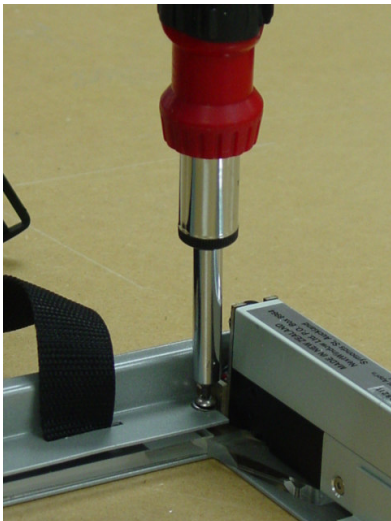


- Remove the three Backlight Retainer Brackets.

Place these components safely to one side ready for re-installation.

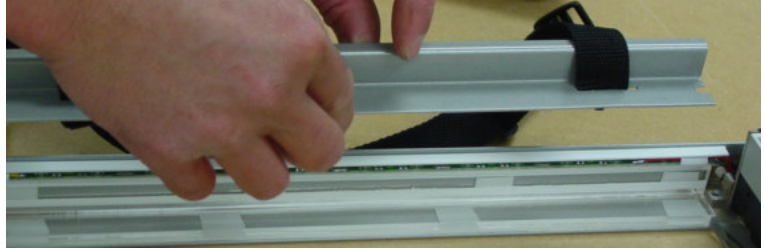


- Loosen the Glass Support Bracket by undoing the two fasteners, using the Allen Key (2mm) but do not remove completely.

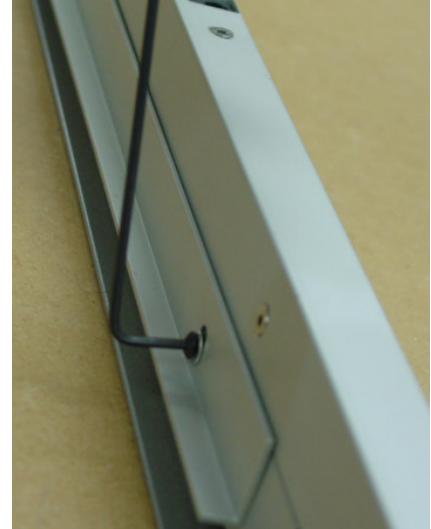


- Take the glass and slide it carefully under the loosened Glass Support Bracket, lifting the Glass Support Bracket out of the way at the same time.

Push the Glass until the top edge makes contact with the Camera Bar.

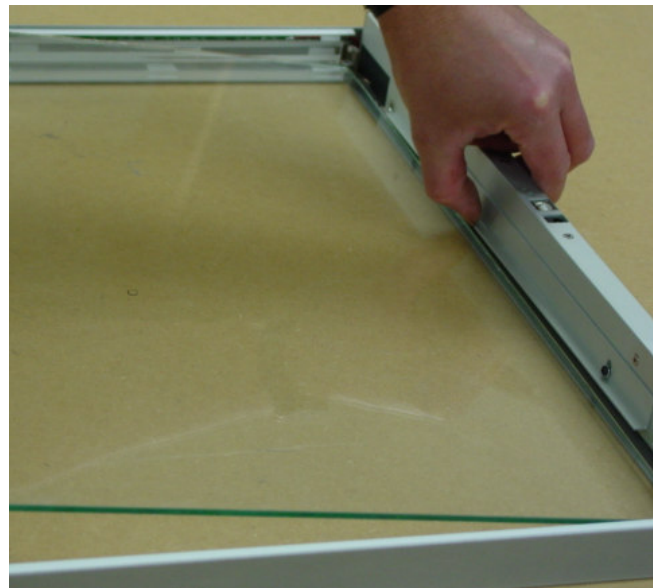



Ensure the Glass is placed centrally on the Frame and that an even gap is provided around the remaining edges of the glass

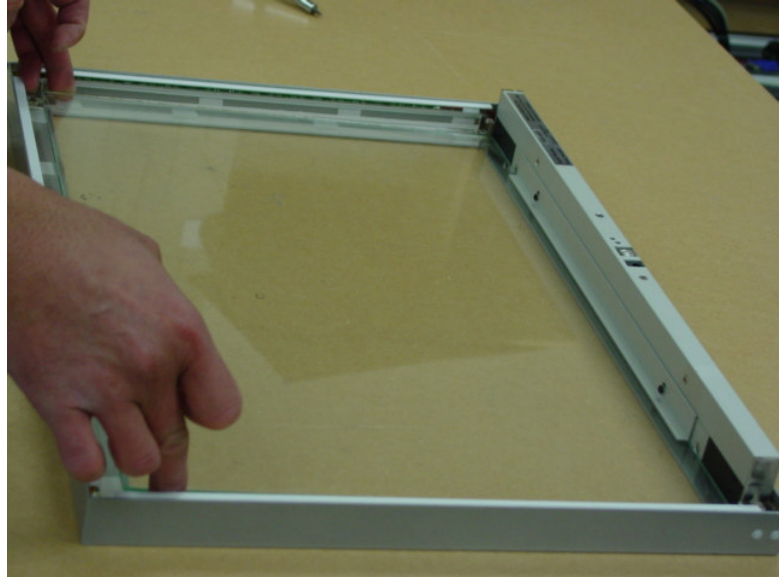


- Refit the removed Backlight Retainers, clamps and fasteners.

Place the three Backlight Retainer Brackets into their original positions and secure using the Backlight Retainer clamps and fasteners. Again, tighten the screws using the Screwdriver or Allen Key (3mm).

Note: Be careful not to move the glass or overtighten the fasteners

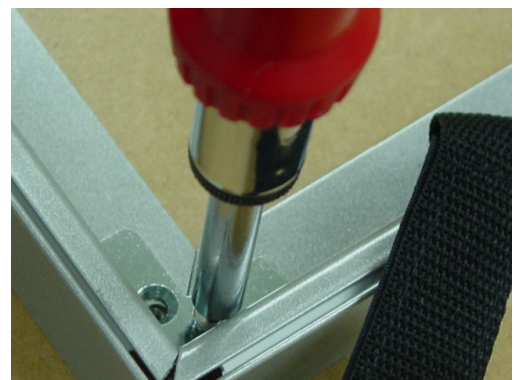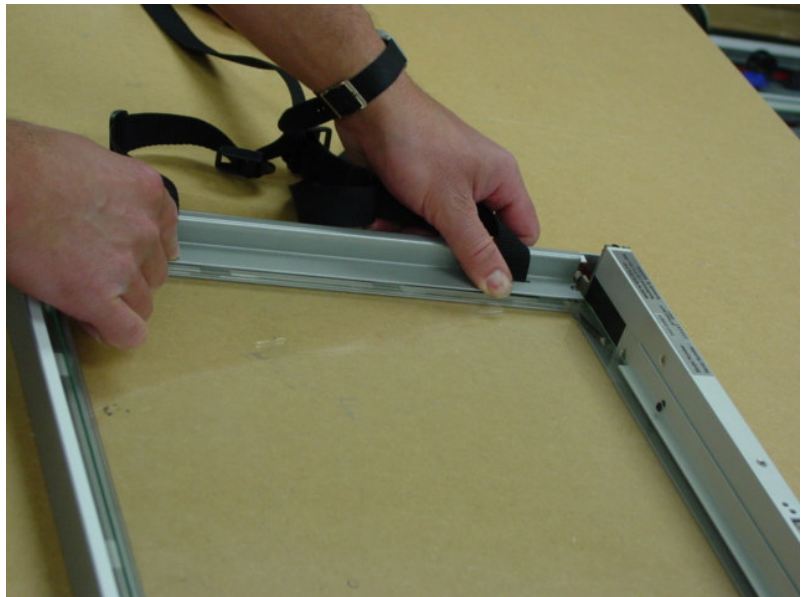

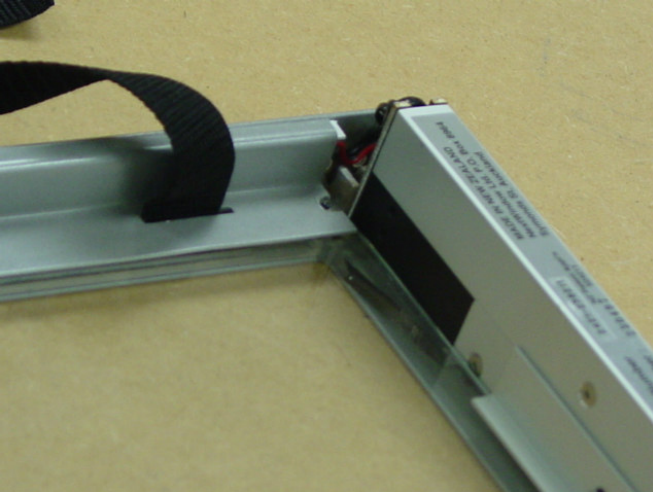

- Finally lower the Glass Support Bracket until it makes contact with the glass and then tighten the two fasteners.

